Removing Seat Pad for Cleaning

AWARNING

Do not use this child restraint without the seat pad. Failure to do this can result in serious injury.

Removal of Harness:



From the back of the seat, unfasten harness from splitter plate.




Pull harness through the slots from the front.

Unthread harness from the harness retainer.

Unthread harness from the buckle plates.

Pull harness out of shell.

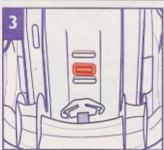


From under seat, locate buckle's metal clip.



Insert buckle's metal clip up through the shell and pad. From the front, pull buckle free from shell and pad. Lock buckle plates into buckle for future use.

Removal of Pad:

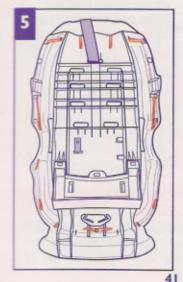

From the back of the child resraint, remove the elastic straps.


40

continued on next page.



Pull pad off the shell.

Clean with warm sudsy water, rinse clean and air dry. Do not use bleach or other harsh cleaners.

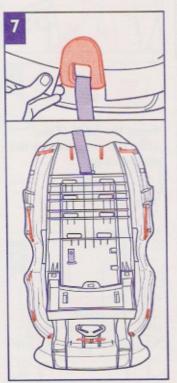

Replace seat pad by reversing order, starting by laying pad in shell. Tuck in pad around harness adjuster. Hook the elastic straps at top of seat. Turn seat over and thread all elastic straps into the holes and connect them to the posts.

Reinstall Harness



Fit the buckle strap down through the slot in the seat. Make sure buckle faces out.



From under seat, pull metal clip down through slot in bottom of seat.

From the front, pull up on buckle to make sure buckle's metal plate stops against the shell.

AWARNING

Failure to place buckle's metal plate completely through pad and shell can result in serious injury or death to the child.



Thread the harness down through slot on left side of shell (1), across bottom of seat (2) and up through slot on right side (3). Make sure harness adjustment strap is between shell and harness strap.

Thread one buckle plate onto harness from back to front (4). Thread the harness retainer (5). Do the same to the other harness end. Make sure the harness is not twisted and the harness ends are even.

Push harness ends through upper slots in shell (6).



From the back of the seat, fasten harness to splitter plate.

AWARNING

Failure to reattach the buckle and harness correctly, can result in serious injury or death.

Trouble Shooting

✓I. If your child restraint is not held securely by the belt:

Press down firmly on the child restraint and remove all the slack in the belt. Make sure the belt buckle is not up against the child restraint where the belt cannot be tightened. Review Locking Clip section and Top Anchorage Strap Section. If you cannot secure the child restraint tightly, move it to another seating location.

V2. If the child restraint buckle or harness adjustment lever sticks or you cannot get the straps tight enough around child:

DO NOT LUBRICATE. Check around buckle and harness release lever for dropped food, sticky spilled drinks, dirt, leaves, etc. Clean with warm water and/or remove object with tweezers. If you cannot get the harness to adjust and remain tight with the buckle securely locked, do not use the child restraint.

. If your harness twists or ropes:

Straighten the harness each time you put your child in the seat to help prevent twisting. Lock the buckle and tighten harness and it will be ready for next use.



√4. If your infant sits too upright in the rear-facing position:

If your vehicle seat slopes so much that your infant is sitting upright, you may place a rolled towel under the front of the child restraint so that the level line on the side of shell is level (horizontal).

Check often to be sure padding is still in place and the vehicle belt is tight.

AWARNING

Using padding that tilts the child restraint farther back than the level-to-ground line can result in serious injury or death.

Replacement Parts Order Form

Complete the form below. Your model number with color code and manufacturer date code MUST be included on the form to ensure proper replacement parts. Your model number with color code and the date code can be found on a sticker on the side of child restraint. Payment in U.S. dollars must accompany your order. Choose parts needed from the list on the next page.

Return the form with payment to:

Ship To (Please Print)

order:

Dorel Juvenile Group, Inc. Consumer Relations Department P.O. Box 2609 Columbus, IN 47202-2609

Fax orders to: 1-800-207-8182
Please make money orders payable to Dorel Juvenile Group.
Inc. Fill in the area below to charge to Visa or Mastercard.
We do not accept personal checks or Discover Card. All outside of U.S. and Canada MUST use credit card.

Name:	
Address:	
City:	
State/Province:	Zip
Telephone:	
Email Address:	

We MUST have this information to process your

Model Number (5 digits & 3 letters): Manufacture Date (mm/dd/yyyy):

CUT ON DOTTED LINE

Replacement Parts List

NOTE: If requested color is not available, similar color will be substituted.

Part C	ost	Quantity	Total Cost
Crotch Strap/Buckle S	\$4.99 X	= \$	
Harness Strap			
Full Wrap Seat Pad \$-	42.00 X	= \$	
Harness Retainer	\$1.50 X	= \$	The second secon
Cup Holder	\$4.99 X	= \$	
Locking Clip			ber end out muse.
Tether Kit			The state of the state of
Latch Kit\$	24.99 X	= \$	
Instructions	\$0.00 X	= \$	0 8 / 8 / 9
Merchandise Total		\$	
Shipping and hand	lling:	\$	
Up to \$25.00			o \$150.00 \$10.95 o \$200.00 \$11.95

\$50.01 to \$75.00 \$8.95 \$75.01 to \$100.00 \$9.95 \$200.01 and up\$13.95 Outside Continental USA \$10.00

Sales Tax \$ (Indiana, California, and Massachusetts residents add applicable sales tax.

Grand Total

177

No shipping and handling on instructions for quantities under 6. Add \$.50 for each instruction over 6, then add applicable shipping and handling.

Fill Out For Credit Card

Visa Mastercard

Card Exp. Date:

Cardholder's Name:_____

Card Number:

Signature_